ASSEMBLY INSTRUCTIONS

ITEM CODE : **IN 3869**

ITEM DESCRIPTION : **BUTTERFLY DINING TABLE**

1 Reverse the dining top

2 Place the leg as shown in FIG.1 & align the leg to match the apron.

3 Insert the Bolt to fix the leg with the table and tighten the nut with the washer as shown

4 Fix the other 4 leg in the similar way

5 Reverse the Table straight.

(Folded position)

6 Slide the two flaps together horizontally to the end of frame

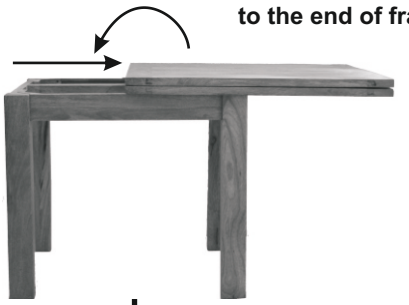

7 Flip the top flap vertically to open the top. Your table is now ready to use.
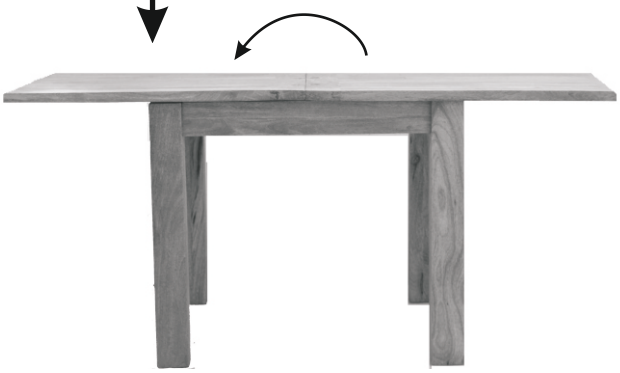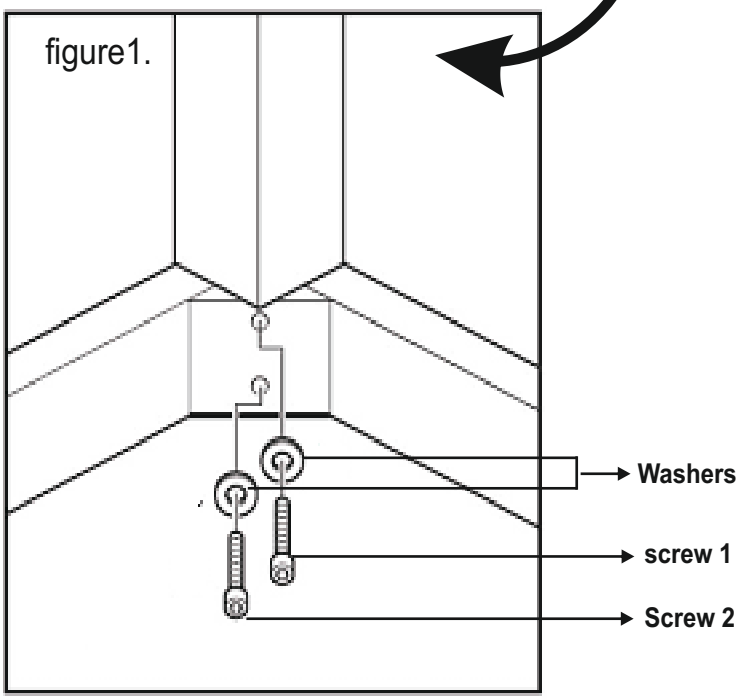
(Opened position)