


ASSEMBLY INSTRUCTIONS

ITEM CODE : IN 3577

ITEM DESCRIPTION : SHOE CABINET

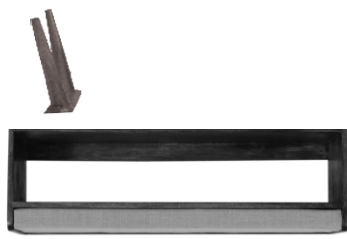


1

Reverse the Cabinet & place the leg as shown & align the leg to match the apron.





2

Insert the Bolt to fix the leg with the unit top and tighten the nut with the washer as shown in fig1

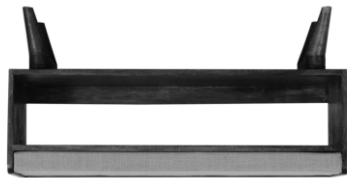

3

Fix the other leg in the similar way

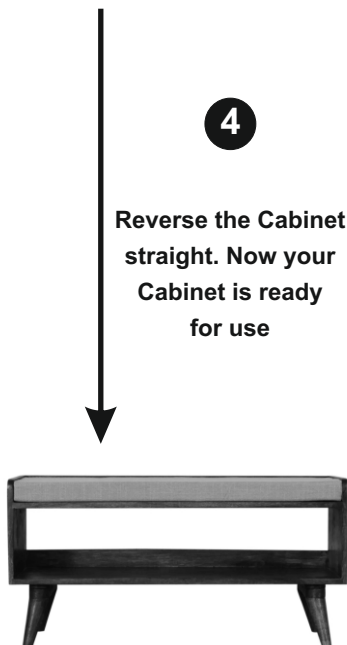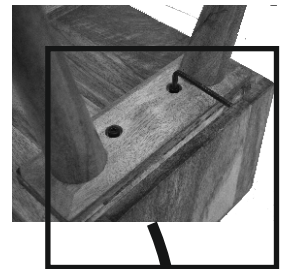

4

Reverse the Cabinet straight. Now your Cabinet is ready for use

