

ASSEMBLY INSTRUCTIONS

ITEM CODE : IN 3918

ITEM DESCRIPTION : CABINET



1

Reverse the Cabinet & place the leg as shown & align the leg to match the apron.



2

Insert the Bolt to fix the leg with the desk top and tighten the nut with the washer as shown in fig1



3

Fix the other leg in the similar way



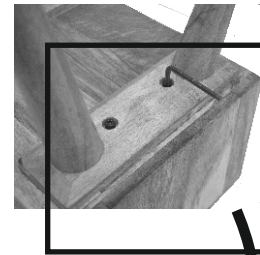


Fig. 1

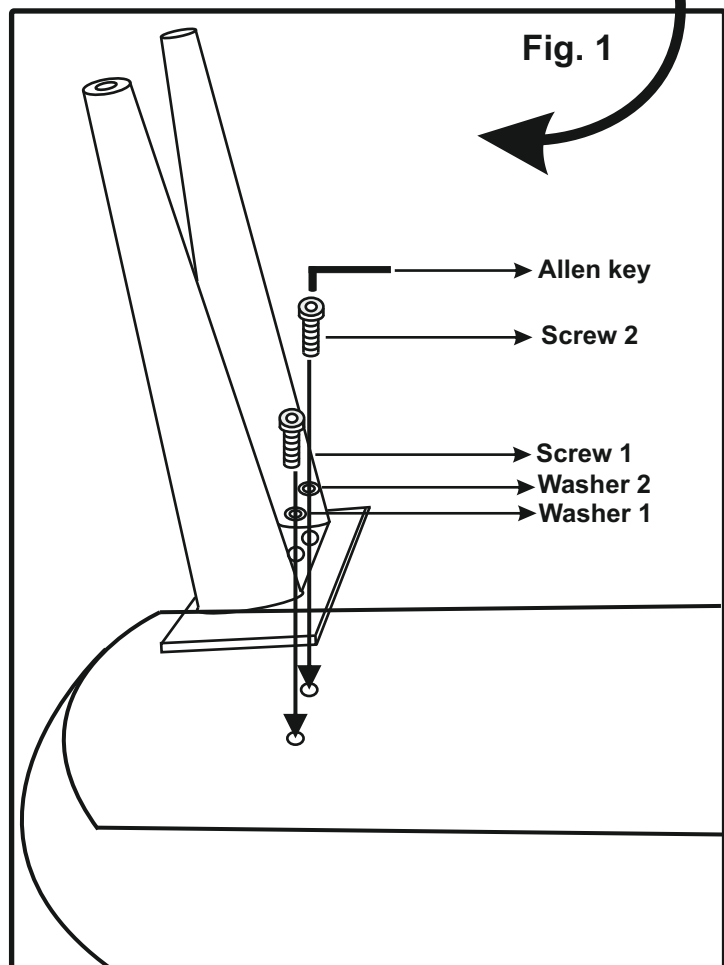

Reverse the Cabinet straight. Now your Cabinet is ready for use

4

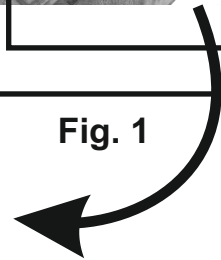